



Water Pipe Removal Instructions

Step One:

Remove nipples with 13/16" ratchet wrench

Step Two:

Take all paddle bolts out and push paddles up and to the side

Step Three:

Remove water pipe attachment bolts and cover plate

Step Four:

Rotate pipe down 90° and remove pipe

Water Pipes	
Water Pipe FJ2-28" Quad Feeder	WP FJ2-28
Water Pipe FJ4-48" Finish Feeder	WP FJ4-48
Water Pipe 28"	WP28
Water Pipe 36"	WP36
Water Pipe 42"	WP42
Water Pipe 48"	WP48
Water Pipe 56"	WP56
Water Pipe 56" FEF	WP56-FEF
Water Pipe 60"	WP60
Water Pipe 70"	WP70
Water Pipe 76"	WP76
Water Pipe 77"	WP77
Water Pipe 84"	WP84
Water Pipe 96"	WP96

